



ADJUST VR1 FOR MAXIMUM OUTPUT VOLTAGE [30V]
 POT1 = FRONT PANEL VOLTAGE ADJUST

ADJUST VR2 FOR MAXIMUM OUTPUT CURRENT [3A]
 POT2 = FRONT PANEL CURRENT

Disp1 = OUTPUT VOLTAGE INDICATOR [75 ohm impedance]
 ADJUST VR3 FOR OPTIMUM VOLTAGE INDICATION

Disp2 = OUTPUT CURRENT INDICATOR [75 ohm impedance]
 ADJUST VR4 FOR OPTIMUM CURRENT INDICATION